
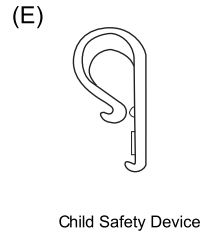
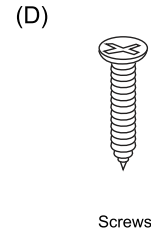
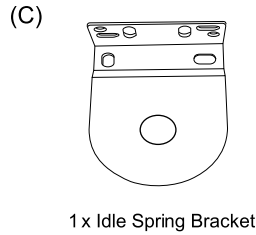
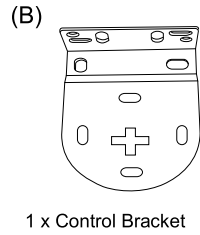


ROLLER BLIND INSTALLATION

PARTS INCLUDED

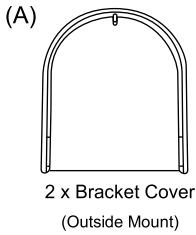

IMPORTANT NOTES:

1. Please check that all parts have been supplied before you begin to assemble your new Custom Roller Blind.
2. Do not unroll the blind until it is fully installed.
3. The finished blind width is from the outside of the left bracket to the outside of the right bracket.
4. Ensure that the blind is mounted level for correct operation.



1. Positioning Blind

As per your order, determine the correct fitting location

- i) inside the window frame (Inside Mount) or;
- ii) on the window frame or wall (Outside Mount)



2. Installing Mounting Brackets

- i) Place the Control Bracket in the desired location, as per your order i.e. on the LHS or RHS, mark and if necessary pre drill 2 holes. After drilling the holes, secure the bracket with screws. (Wood screws have been provided, however screws suitable for gyprock or brick walls may need to be purchased)
- ii) Repeat this process for the Idle Bracket (See Important Notes 3 above)

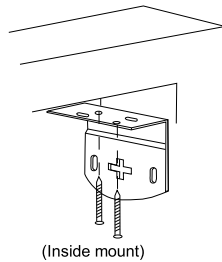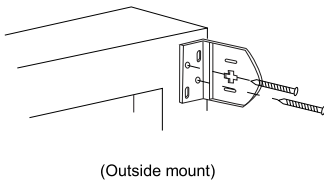

3. Attaching Blind to Brackets

- i) Insert the idle mechanism into the idle bracket so it is engaged. (figure 1)
- ii) Carefully align the chain control mechanism with the control bracket (figure 2) (this is the one with the cross). Push the blind into the control bracket, ensuring the chain is hanging directly down. Hook into place with a gentle downward motion.

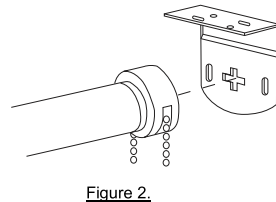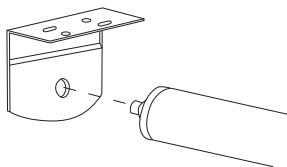

4. Operating the Blind

Using the chain, draw the blind down and up several times to ensure the blind operates successfully.

5. Attaching Chain Child

Secure the child safety device to the wall beside the blind, ensuring the chain is not too tight, as this may restrict smooth operation.

CHILD SAFETY FOR BLINDS WITH CHAIN CONTROL

Warning:

THE CHAIN TENSION DEVICE MUST BE FITTED TO ENSURE CHILD SAFETY.



THE CHAIN TENSION DEVICE MUST BE FITTED.
IT IS TO BE POSITIONED AT THE BOTTOM OF THE CHAIN LOOP.

IT CAN BE FITTED TO THE INSIDE OF THE REVEAL (FRAME)
OR IN FRONT OF THE REVEAL (FRAME.)

FITTING INSTRUCTIONS

1. POSITION THE TENSION DEVICE AT THE BOTTOM OF THE CHAIN LOOP AS SHOWN PER FIGURE 1.
2. INSTALL THE TENSION DEVICE ONTO THE REVEAL/FRAME, MAKING SURE THAT THE LOOP CHAIN HANGS WITH MINIMAL TENSION. (AS SHOWN IN FIGURE 2)

FIGURE 1


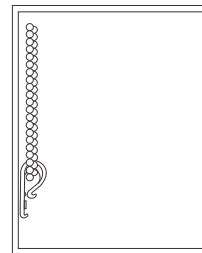


FIGURE 2: Tension Device with chain fitted



“Please be aware that horizontal lines may appear on the roller blind fabric due to packaging. These lines will drop out once the blind has been hanging for a few days.”

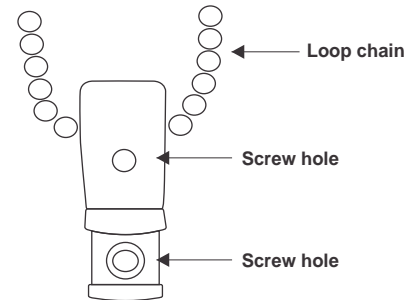

WARNING - ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

* A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed.

* If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain.

* If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.